


4

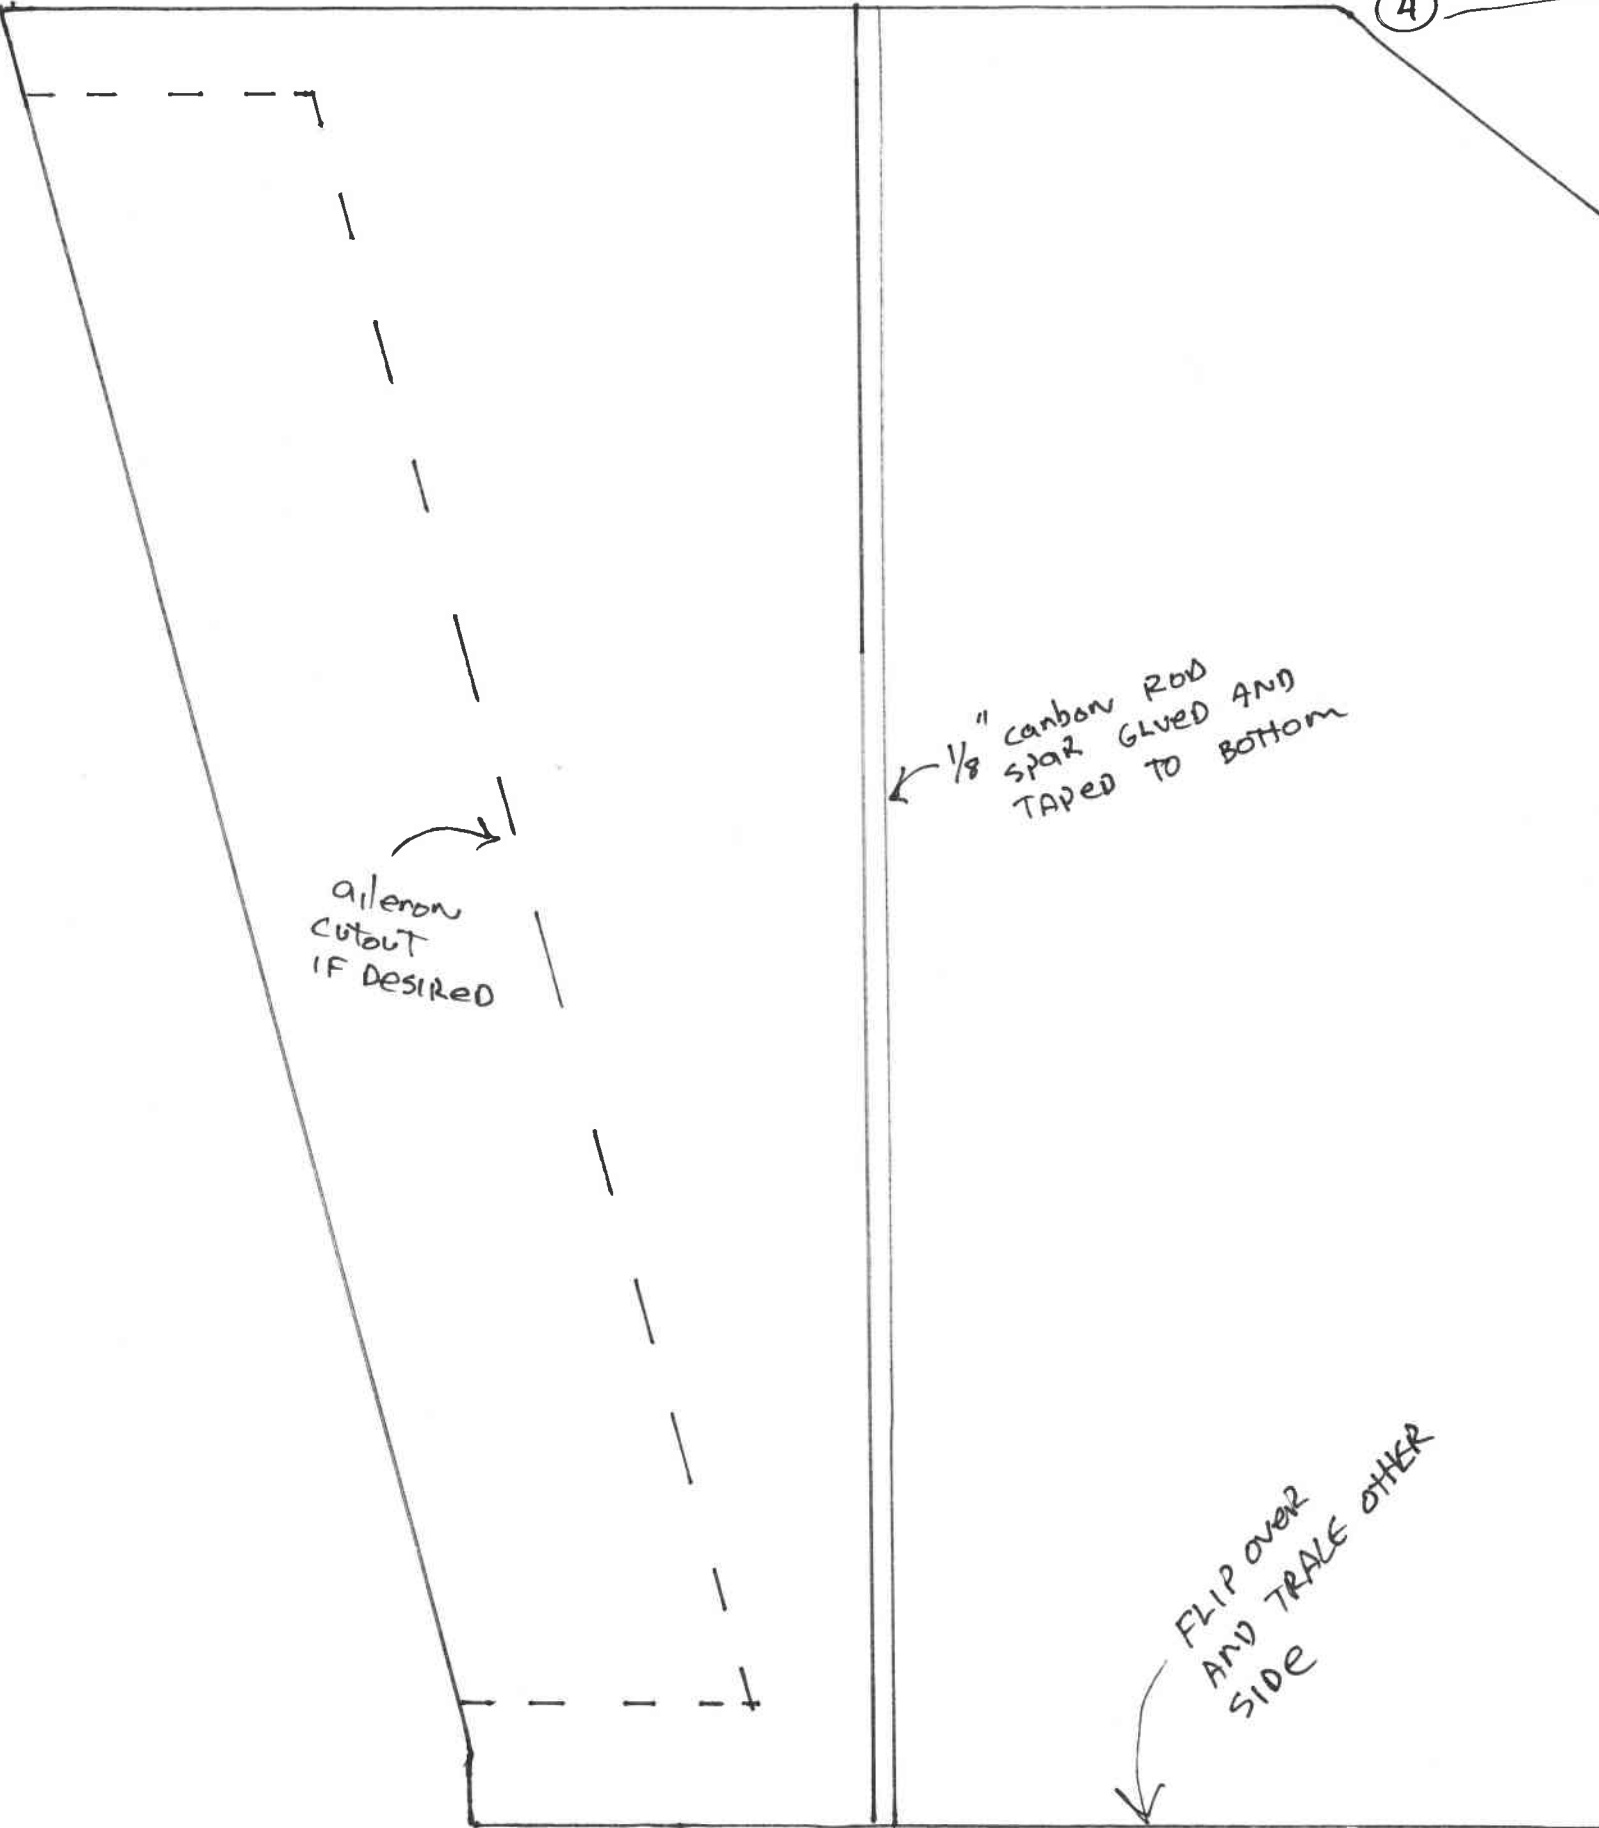

aileron cutout IF DESIRED

1/8" carbon rod spar GLUED AND TAPED TO BOTTOM

FLIP OVER AND TRAIL OTHER SIDE


4

5

Wing TIP
6mm x 2

Wing 6mm

CG
↓

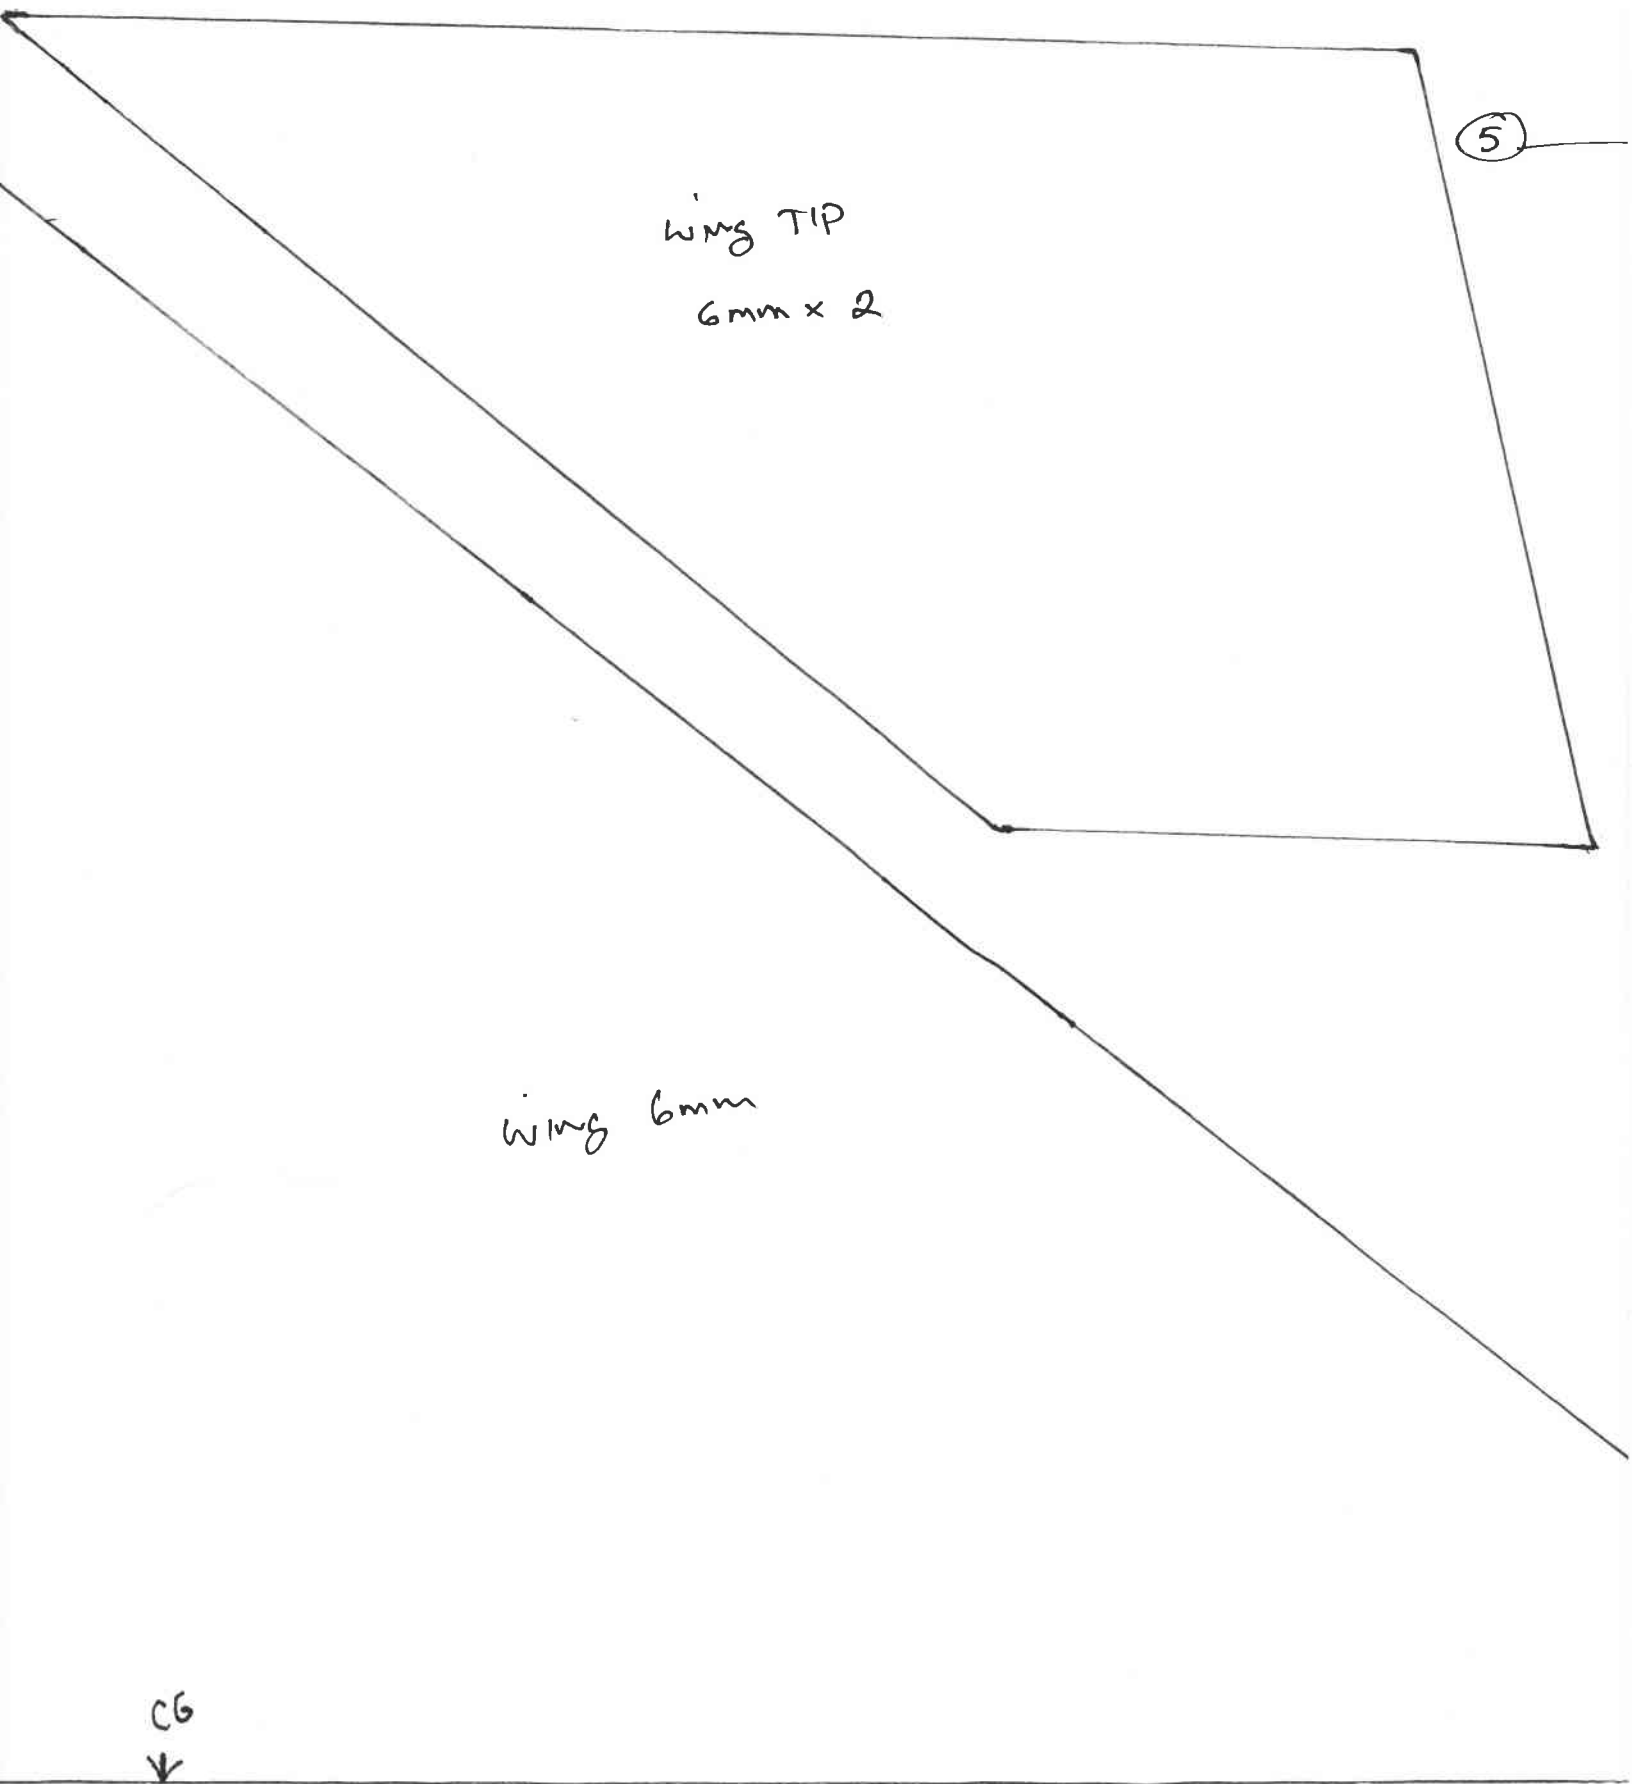

5"

5

2014 FRANK BURKE
ALL RIGHTS RESERVED
NO REPRODUCTION FOR
COMMERCIAL USE OR RE-SALE


F-4 phantom II junkjet
for grayson microjet V-3
APC 6x4
800mah 3s or similar
2-3 servos
15-16 oz RTF


4"

mount wings @ $\pm 10^\circ$ up
Tail @ $\pm 15^\circ$ - 25° down

↓ PIVOT
POINT
FOR FULL
FLYING
TAIL

6mm x 2

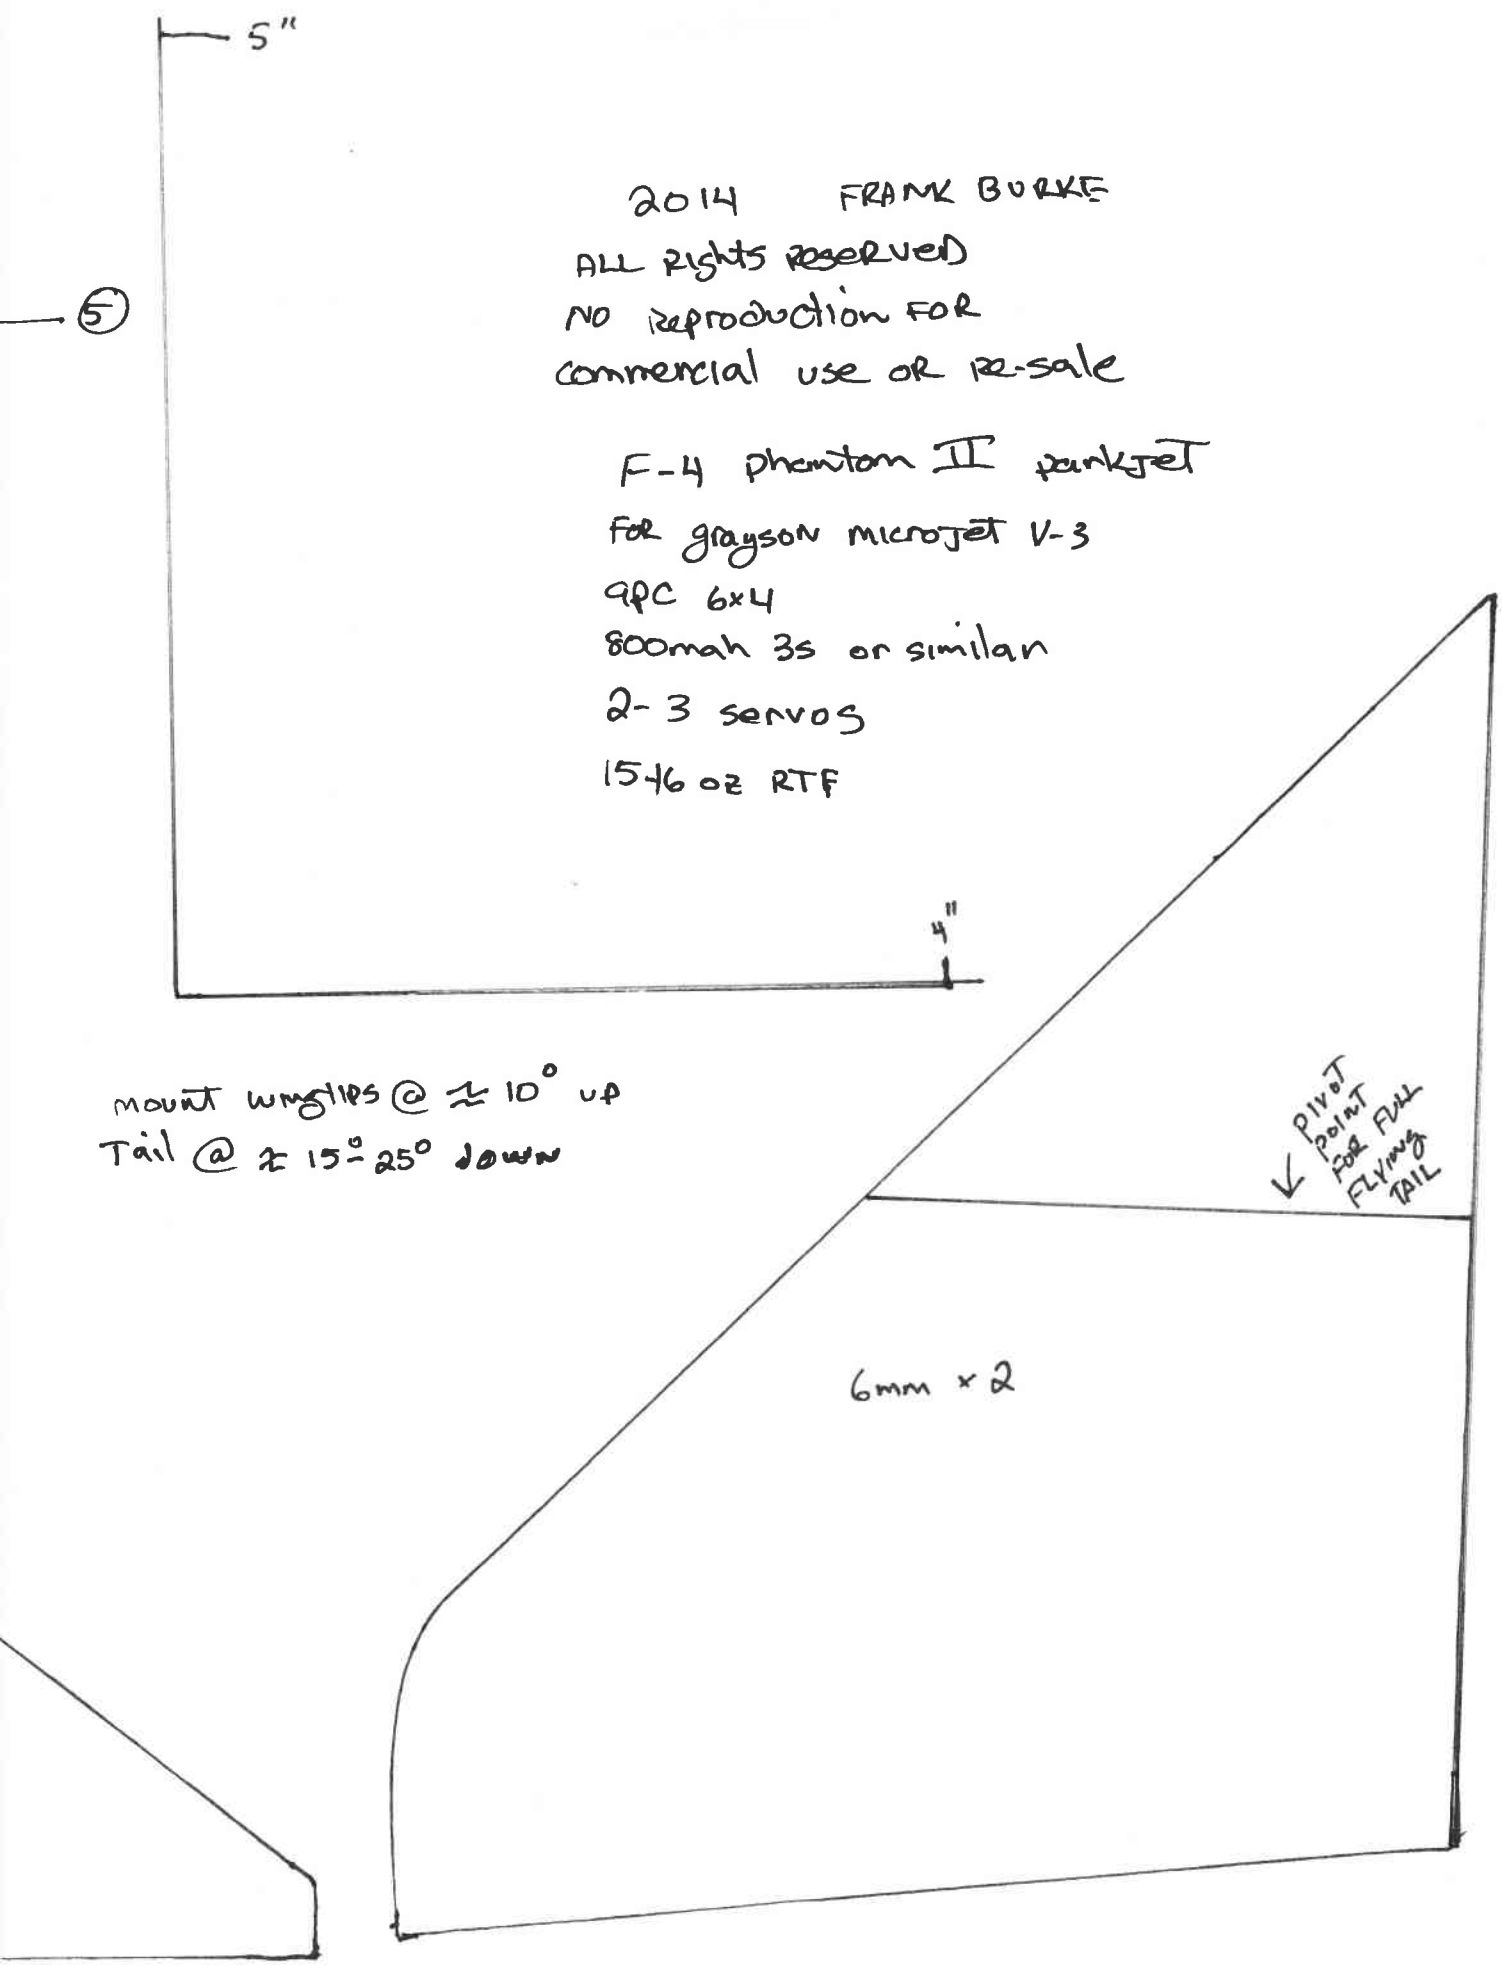

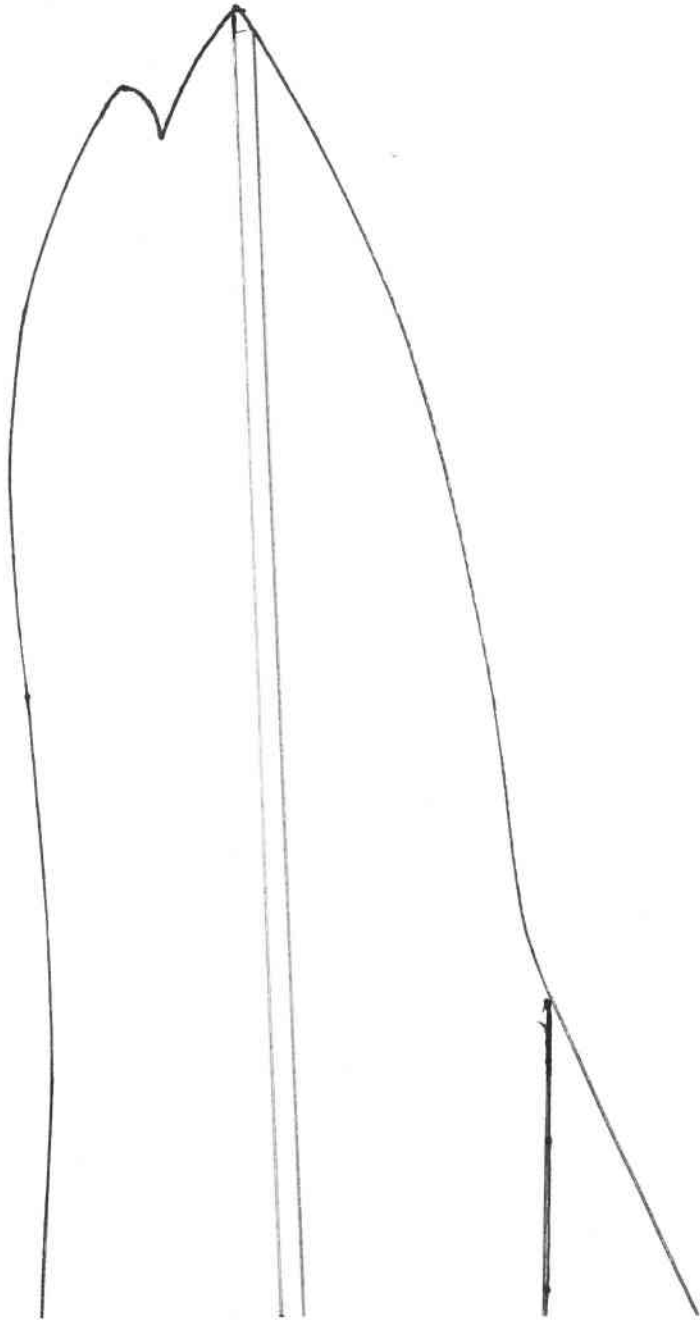


①

②

①

1/8" carbon
NDF
Reinforcing
Laminate
INSIDE INNER-FUSE
DOUGLASS / CENTER-FUSE

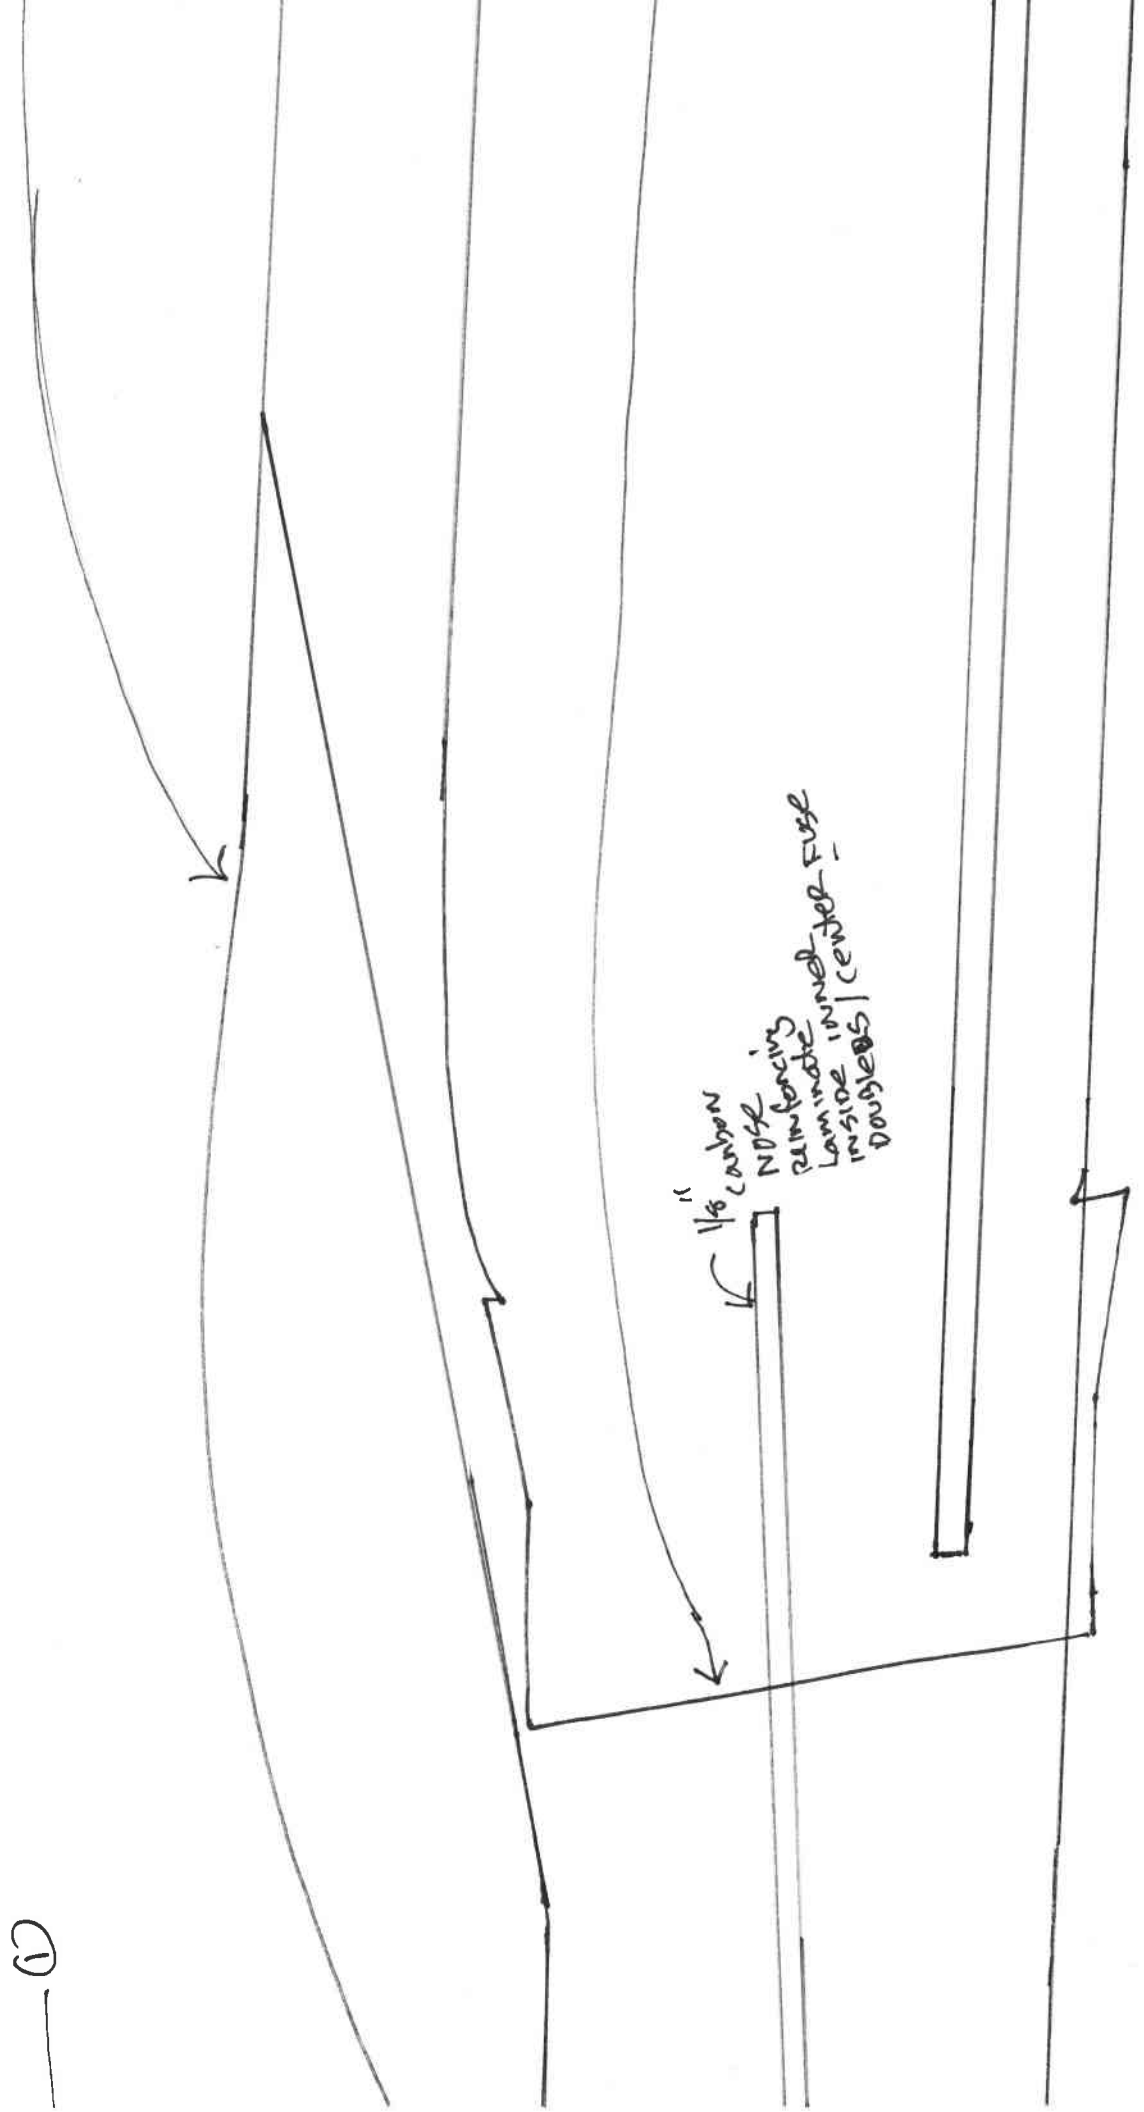


②


FOR INNER DOUBLERS TRIM TEMPLATE
OFF AT CANOPY LINE - TRIM OFF
VERTICAL TAIL AND DASTED ARRESTOR HOOK
MAKE 2 - 6mm

③

CUT ON THESE
LINES FOR
OUTER DOUBLERS
6mm - make 2

CUT OFF
ALL PAGES
TOWARD THE
WING SLOT

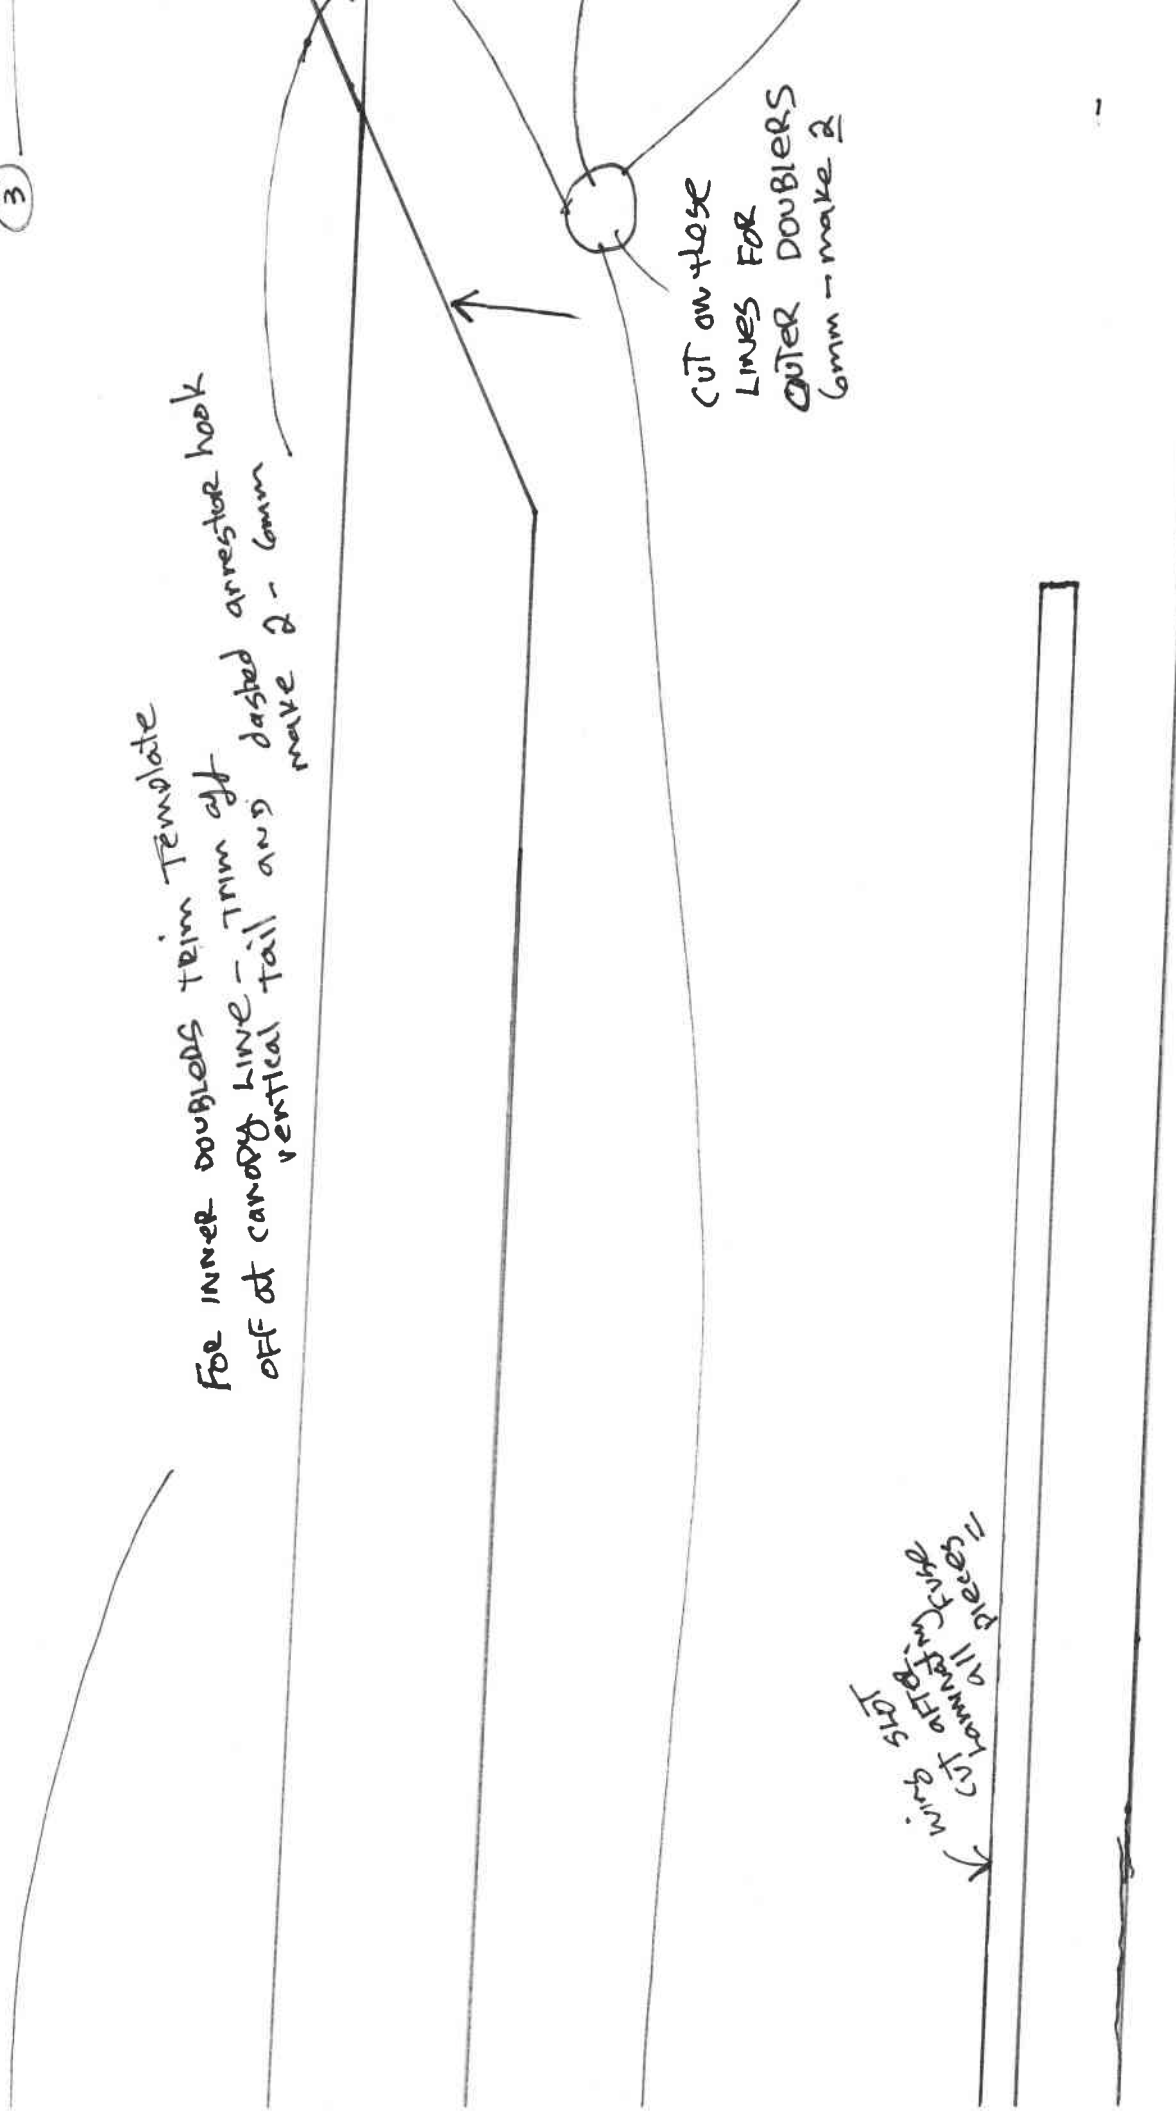

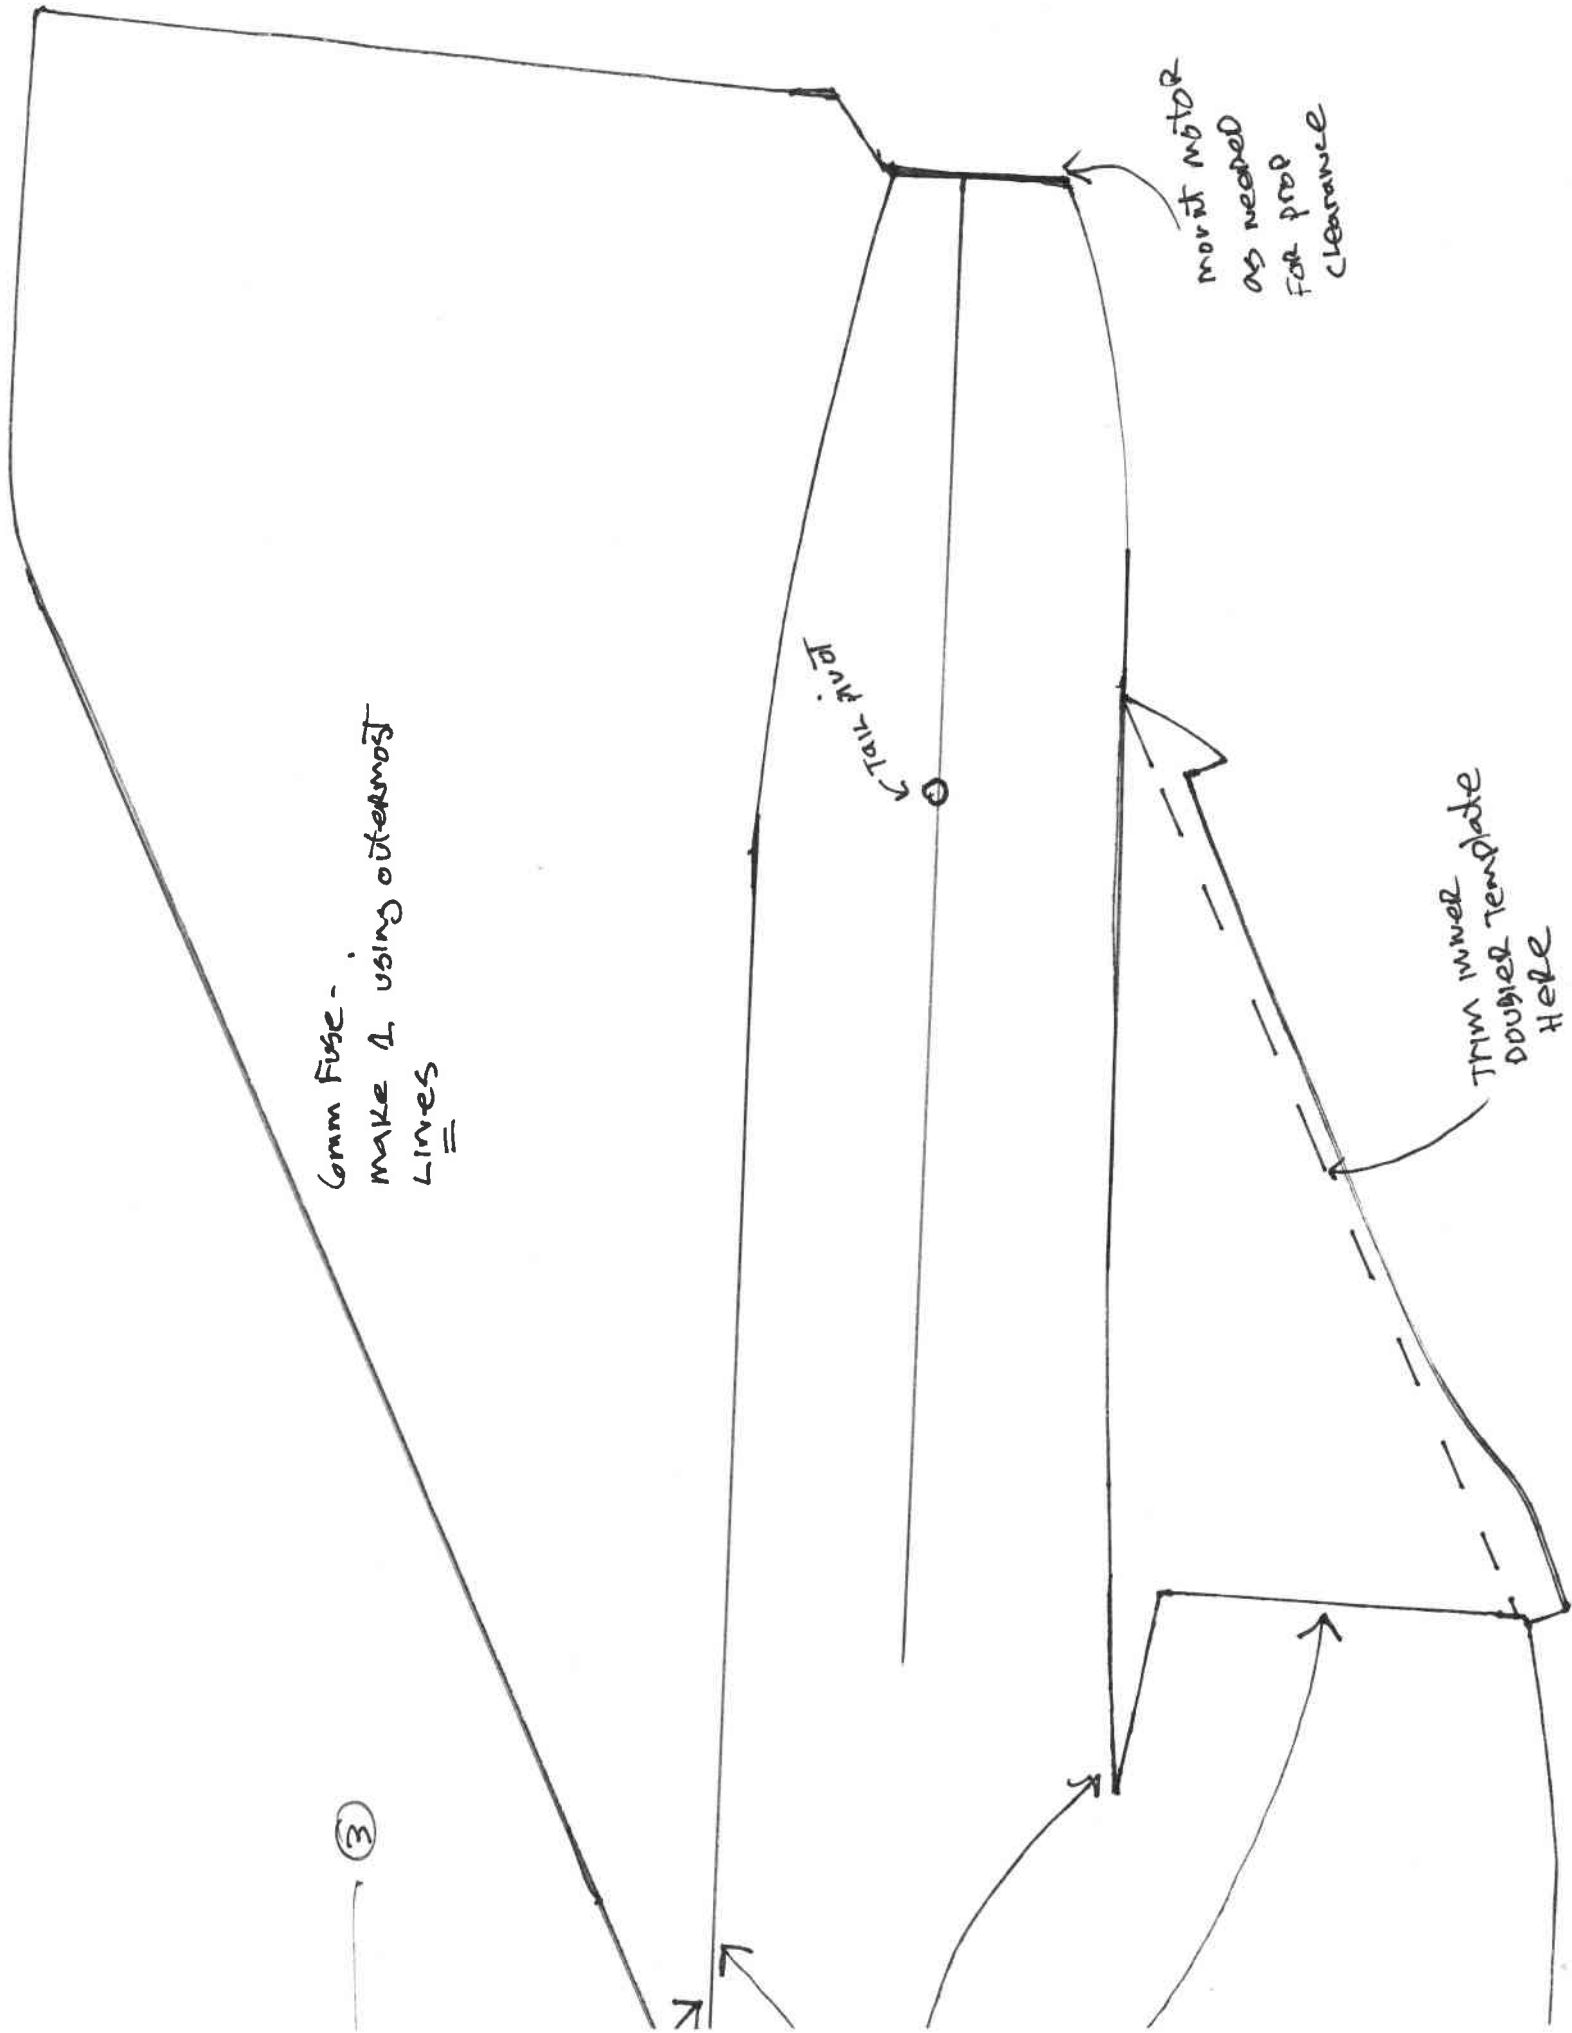

3

Grm Fuse -
MAKE 1. using outermost
LINES

← Tail fin

mount motor
as needed
for prop
clearance

Trim inner
DOUBLED template
HERE